

# C6

## USER MANUAL

### NOTICE

Thank you for purchasing our electric kids scooter.

Electric motorcycles can also be dangerous, so please bring protective gear.

Please take the time to study and read this manual carefully, especially the safety instructions page.

We hope you will enjoy this product.

1

### PREPARATION



Be sure that wear a helmet and safty gear when you ride it.



Confirm the forward direction of the motorized child scooter.




Please familiarize yourself with the acceleration and braking of the electric children's scooter starting from the low speed mode.



Please stop riding by decelerating the brake operation, lower your feet first to stabilize and then open the bracket before dismounting.

2

### PARTS DIAGRAM

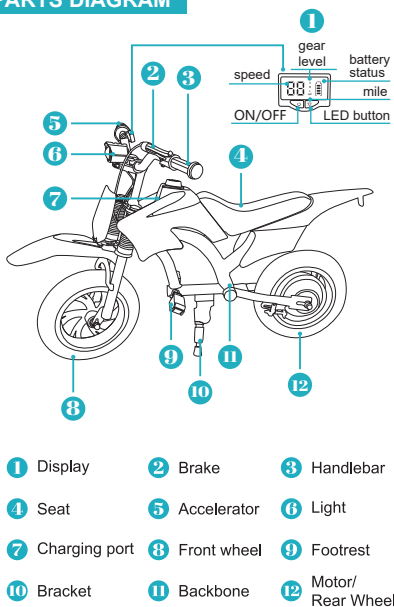

- 1 Display
- 2 Brake
- 3 Handlebar
- 4 Seat
- 5 Accelerator
- 6 Light
- 7 Charging port
- 8 Front wheel
- 9 Footrest
- 10 Bracket
- 11 Backbone
- 12 Motor/Rear Wheel

3

### OPERATING INSTRUCTIONS

1. Long press the "on/off" key to turn on and off the machine, switch on and off the machine has a voice announcement, the default motorcycle sound effect is turned on after the machine is turned on.



2. Press the "Light" to turn on and off the headlights.



3. Press the "on/off" button to switch gears;  
 1 st gear (L) speed for 0-6km / h;  
 2 nd gear (M) speed for 0-12km/h;  
 3 rd gear (H) speed for 0-16km/h.



4. Press the "on/off" key twice to switch the display of kilometers and miles (default kilometers), and the 1, 2 and 3 gears in the mileage state. The speeds are 4mph, 7mph, and 9mph (miles are kilometers if the mile icon is not lit).



5. Press the "on/off" button three times to turn on or off the motorcycle sound effects (default on), but does not affect the music output of the Bluetooth connection, when the Bluetooth playback of music will be shielded from the sound output only play Bluetooth music.

4

### PARTS DIAGRAM

Model	C6 Children's scooter
Motor	12-inch 160W brushless motor
Display	3-speed LCD display
Light	LED
Controller	Brushless Controller + Moto Sound
Charger	25.2V 8A
Charger	25.2V 2.6Ah
Charging time	3.5 Hours
Max speed	16 Km/h
Maximum load	50 KG
Max distance	2 Hours
Applicable age	3+
Wheel	12*2.4 inch
Colour	Red, Blue, Green, Orange
Box size	35.4X9.8X 20.8 inch
N:W	10 KG
G:W	13.5KG

5

### SAFETY INSTRUCTIONS



Electric kids scooters should be treated with proper care. Always prioritize safety as there is a possibility of losing your balance, resulting in a collision or fall. Make sure you are using it in a safe and proper environment and always wear proper safety gear.



Safety Equipment: Always wear complete safety equipment when you ride. Please wear appropriate protective gear, helmet, elbow pads, knee pads, and gloves.



Flip-flops or similar loose shoes are not suitable for riding motorized children's scooters.



The electric children's motorcycle is suitable for ages 3 years old and above, please be sure to play together in the company of an adult.



Each motorized children's scooter can only be used by one person, if more than one person uses it it will not be easy to maneuver, you may lose balance and fall, or you may lose control or otherwise break.



Please obey local traffic laws.



This electric kids scooter is intended to be driven on flat and paved surfaces. Avoid traveling on, sand, gravel, mud, rough or open surfaces. Do not drive on slippery surfaces such as snow, ice or wetlands.



Keep fingers, hair and clothing away from motors, wheels and moving parts.



Do not open or tamper with the electronics housing. Electrocutation may occur and this will also void the warranty.

6

SER MANUAL