

NAVEE

NAVEE Electric Scooter

G5 US/G5 Pro US/G5 Max US

EN

Quick User Guide

FR-CA

Guide d'utilisation rapide


ES-LA

Guía rápida de usuario



1. Assembly/Montage/Armado


Click/Clic/Clic

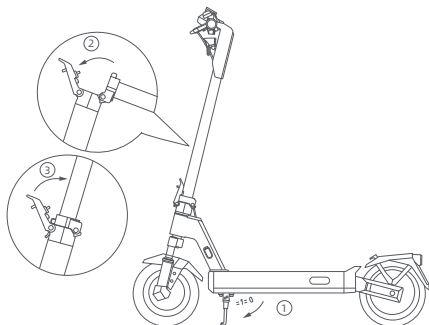

EN Put down the kickstand, and hold up the stem until it is completely in an upright position. Then push the quick release lever inward to the end.

FR-CA Abaissez la béquille, puis relevez le tube de direction jusqu'à ce qu'il soit complètement en position verticale. Ensuite, poussez le levier de serrage rapide vers l'intérieur jusqu'à ce qu'il se verrouille.

ES-LA Baje la pata de apoyo y levante el tubo de dirección hasta que esté completamente en posición vertical. Luego, empuje la palanca de liberación rápida hacia adentro hasta que se bloquee.

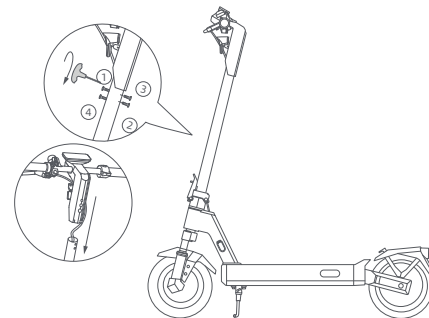


EN Install the handlebar onto the stem, and make sure to install the handlebar in the correct direction. Follow the number order as illustrated to pre-tighten the four screws with the included Allen key. Make sure the handlebar is correctly installed and then tighten the screws thoroughly.

FR-CA Installez le guidon sur le tube de direction et assurez-vous de le positionner dans le bon sens. Suivez l'ordre illustré pour préserrer les quatre vis à l'aide de la clé Allen fournie. Une fois le guidon correctement positionné, serrez complètement les vis.

ES-LA Instale el manillar en el tubo de dirección, asegurándose de colocarlo en la dirección correcta. Siga el orden indicado para preajustar los cuatro tornillos con la llave Allen incluida. Una vez que el manillar esté en la posición correcta, apriete completamente los tornillos.

2. Charging/Chargement/Carga

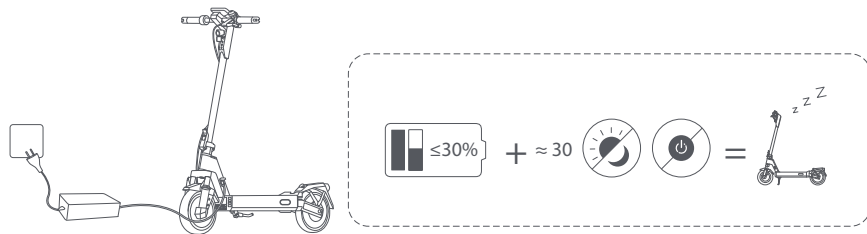


EN The scooter is fully charged when the LED on the battery charger changes from red to green.
WARNING: Do not charge the non rechargeable batteries. Charge your scooter indoors, and never expose it to rain. When the scooter is turned off for about a month with the battery level of the scooter being lower than 30%, the scooter will enter sleep mode. In this case, the scooter cannot be turned on. To exit the sleep mode, charge the scooter for about three seconds to activate the battery.

FR-CA Le scooter est complètement chargé lorsque le voyant LED du chargeur de batterie passe du rouge au vert.
AVERTISSEMENT : Ne rechargez pas les piles non rechargeables. Rechargez votre trottinette à l'intérieur et ne l'exposez jamais à la pluie. Lorsque la trottinette est éteinte pendant environ un mois ayant le niveau de batterie étant inférieur à 30%, la trottinette entrera en mode veille. Dans ce cas, la trottinette ne peut pas être allumée. Pour quitter le mode veille, charger la trottinette pendant environ trois secondes pour activer la batterie.

ES-LA El scooter está completamente cargado cuando el indicador LED del cargador de batería cambia de rojo a verde.
ADVERTENCIA : No cargue baterías no recargables. Cargue su scooter en interiores y no lo exponga a la lluvia. Cuando el monopatín se apaga por un mes con el nivel de batería por debajo del 30%, el monopatín entrará en el modo de reposo. Si esto ocurre, su monopatín no podrá encenderse. Para salir del modo de reposo, cargue su monopatín durante tres segundos para activar la batería.

3. Download the NAVEE App/ Téléchargement de l'application NAVEE/Descarga de la aplicación NAVEE

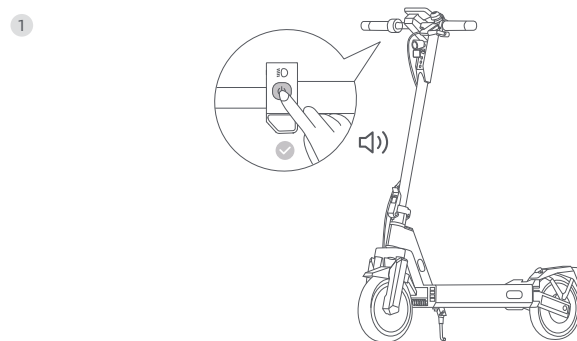

EN Note: For your safety, the scooter will stay in speed limit of 10 km/h and beep continuously before activation. To unlock full functions, please activate the scooter via the NAVEE App. Once activated, the beeping will stop and speed limits will be lifted.

FR-CA Remarque : Pour votre sécurité, la trottinette restera limitée à 10 km/h et émettra des bips en continu avant son activation. Pour déverrouiller toutes les fonctionnalités, veuillez activer la trottinette via l'application NAVEE. Une fois activée, les bips cesseront et les limites de vitesse seront levées.

ES-LA Nota: Por su seguridad, el scooter permanecerá limitado a 10 km/h y emitirá un pitido continuo antes de la activación. Para desbloquear todas las funciones, active el scooter a través de la aplicación NAVEE. Una vez activado, el pitido se detendrá y se eliminarán las restricciones de velocidad.

2



Google Play




App Store

EN Scan the QR code to download and install the NAVEE App. Then register and log in.

FR-CA Scannez le code QR pour télécharger et installer l'application NAVEE. Ensuite, inscrivez-vous et connectez-vous.

ES-LA Escanee el código QR para descargar e instalar la aplicación NAVEE. Luego regístrate e inicie sesión.


3

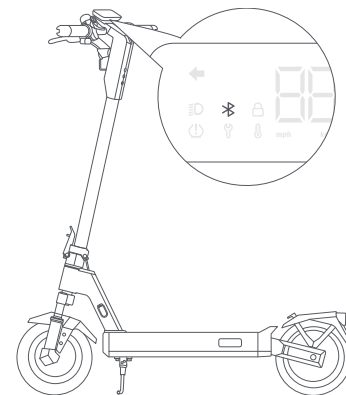

EN Power on the scooter; a blinking Bluetooth icon indicates the scooter is waiting to be connected.

FR-CA Mettez la trottinette sous tension; une icône Bluetooth clignotante indique qu'elle est en attente de connexion.

ES-LA Encienda el scooter; un icono de Bluetooth parpadeando indica que el scooter está esperando ser conectado.

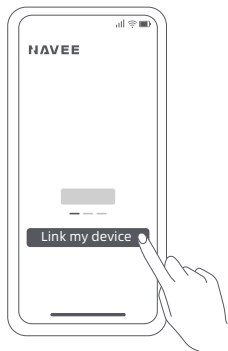

EN Open the NAVEE App, tap [Link my device] and follow the instructions to link your scooter.

FR-CA Ouvrez l'application NAVEE, cliquez sur [Lier mon appareil], puis suivez les instructions pour connecter votre trottinette.

ES-LA Abra la aplicación NAVEE, haga clic en [Vincular mi dispositivo] y siga las instrucciones para vincular su scooter.

4. How to Ride/Conduire votre scooter/Cómo conducir

1 Before Riding/Avant de conduire/Antes de conducir




EN Always wear a helmet, hand/wrist pads, knee pads, elbow pads, and other protective gear to minimize any possible injury.

FR-CA Portez toujours un casque, des protège-mains/poignets, des genouillères, des coudières et d'autres équipements de protection pour réduire les risques de blessure.

ES-LA Use siempre casco, muñequeras, rodilleras, coderas y otros elementos de protección para minimizar cualquier posible lesión.

2 Starting & Accelerating/Démarrage&Accélération/ Inicio&Aceleración

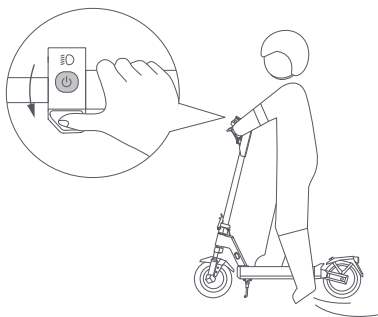

EN Place one foot on the deck and use the other foot to slowly push off. Once the scooter is gliding, put both feet on the deck and gently press the accelerator.


Note: This electric scooter is powered by an electric motor. For your riding safety, the motor will not start until the speed reaches 5 km/h.

FR-CA Placez un pied sur le plateau et utilisez l'autre pied pour prendre lentement de l'élan. Une fois que la trottinette avance, placez les deux pieds sur le plateau et appuyez doucement sur l'accélérateur.

Remarque : Cette trottinette électrique est alimentée par un moteur électrique. Pour votre sécurité, le moteur ne s'enclenche que lorsque la vitesse atteint 5 km/h.

ES-LA Coloque un pie sobre la plataforma y use el otro pie para impulsarse lentamente. Una vez que el scooter se deslice, coloque ambos pies sobre la plataforma y presione suavemente el acelerador.
Nota: Este scooter eléctrico funciona con un motor eléctrico. Por su seguridad, el motor no se activará hasta alcanzar una velocidad de 5 km/h.

3 Steering/Direction/Giro

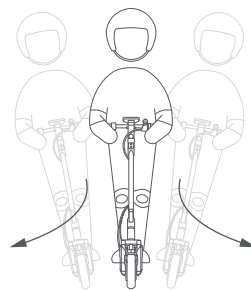


EN Tilt your body to the steering direction as you turn, and slowly turn the handlebar.

FR-CA Penchez-vous dans la direction vers laquelle vous souhaitez tourner en tournant doucement le guidon.

ES-LA Incline seu corpo na direção da curva ao virar e gire lentamente o guidom.

4 Decelerating & Braking/Décélération et freinage/ Desaceleración y frenado

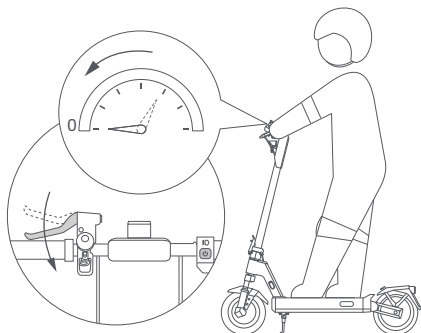


EN Release the accelerator to slow down, and press the brake lever to brake.

FR-CA Relâchez l'accélérateur pour ralentir et appuyez sur le levier de frein pour freiner.

ES-LA Suelte el acelerador para reducir la velocidad y presione la palanca de freno para frenar.

5. Parking/Stationnement/Estacionamiento

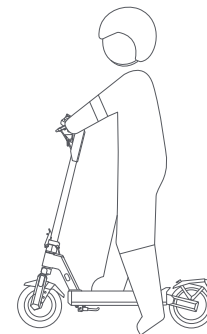

EN When stopping, place one foot on the ground and get off the scooter. Use the kickstand to park.

PARKING WARNING

- Do not park your kick scooter on a slope.
- Make sure that the kickstand is positioned on a flat surface.

FR-CA À l'arrêt, placez un pied au sol et descendez de la trottinette. Utilisez la béquille pour la stationner.

AVERTISSEMENT DE STATIONNEMENT

- Ne stationnez pas votre trottinette sur une pente.
- Assurez-vous que la béquille repose sur une surface plane.


ES-LA Al detenerse, coloque un pie en el suelo y bájese del scooter. Use la pata de apoyo para estacionar.

ADVERTENCIA DE ESTACIONAMIENTO

- No estacione su scooter en una pendiente.
- Asegúrese de que la pata de apoyo esté colocada sobre una superficie plana.

6. Using Apple Find My/Utiliser Apple Find My/ Usar Apple Find My

① Pairing/Jumelage/Emparejamiento

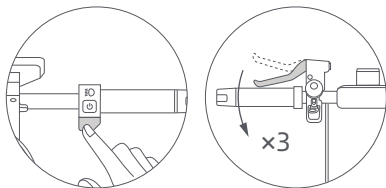

EN With the scooter powered on, squeeze the brake lever and simultaneously briefly press the accelerator 3 times. The scooter will enter Find My pairing mode (indicated by a beep). On your iPhone or iPad, open the Find My app. Tap "+" and select "Add Other Item". When "NAVEE Kids Electric Scooter" appears, tap "Connect". Follow the on-screen instructions. A beep will confirm that the scooter has been successfully paired.

Notes:

- Exit the NAVEE App before using the Find My function.
- If Bluetooth Proximity Unlock is enabled, turn it off in the NAVEE App and unpair the scooter from Bluetooth in the phone setting if already connected. After completing these steps, Find My will function correctly.

FR-CA Lorsque la trottinette est allumée, serrez le levier de frein et appuyez brièvement trois fois sur l'accélérateur. La trottinette passera en mode de jumelage Find My (signalé par un bip sonore). Sur votre iPhone ou iPad, ouvrez l'application Localiser. Appuyez sur « + » et sélectionnez « Ajouter un autre objet ». Lorsque « NAVEE Kids Electric Scooter » apparaît, appuyez sur « Connecter ». Suivez les instructions à l'écran. Un bip confirmera que la trottinette a été jumelée avec succès.

Remarques:


- Fermez l'application NAVEE avant d'utiliser la fonction Localiser.
- Si le déverrouillage par proximité Bluetooth est activé, désactivez-le dans l'application NAVEE et dissociez la trottinette du Bluetooth dans les paramètres du téléphone si elle est déjà connectée. Après ces étapes, la fonction Localiser fonctionnera correctement..

ES-LA Con la patineta encendida, apriete la maneta de freno y presione brevemente el acelerador 3 veces. La patineta entrará en modo de emparejamiento Find My (indicado por un pitido). En su iPhone o iPad, abra la app Buscar. Toque "+" y seleccione "Añadir otro objeto". Cuando aparezca "NAVEE Kids Electric Scooter", toque "Conectar". Siga las instrucciones en pantalla. Un pitido confirmará que la patineta se ha emparejado correctamente.

Notas:

- Salga de la app NAVEE antes de usar la función Buscar.
- Si la función de desbloqueo por proximidad Bluetooth está activada, desactívela en la app NAVEE y desvincule la patineta desde los ajustes de Bluetooth del teléfono si ya está conectada. Tras estos pasos, Buscar funcionará correctamente

2 Unpairing/Dissociation/Desemparejamiento

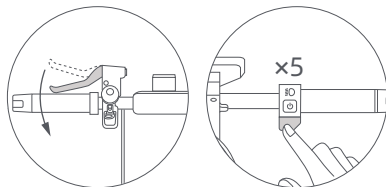


EN With the scooter powered on (and not charging or locked), squeeze the brake lever and simultaneously briefly press the accelerator 5 times. The display will turn off, indicating that Find My has been unpaired.
To pair again, delete the scooter from the Find My app and repeat the pairing process.

FR-CA Lorsque la trottinette est allumée (non en charge et non verrouillée), serrez le levier de frein et appuyez brièvement cinq fois sur l'accélérateur. L'écran s'éteindra, indiquant que Find My a été dissocié. Pour jumeler à nouveau, supprimez la trottinette de l'application Localiser et recommencez le processus de jumelage.

ES-LA Con la patineta encendida (y sin estar cargando ni bloqueada), apriete la maneta de freno y presione brevemente el acelerador 5 veces. La pantalla se apagará, indicando que Buscar ha sido desemparejado.
Para emparejar nuevamente, elimine la patineta de la app Buscar y repita el proceso de emparejamiento.

3 How to Find the Serial Number/Comment trouver le numéro de série/Cómo encontrar el número de serie

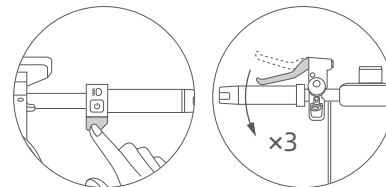

EN For iOS users who have paired the scooter using the Find My app, with the scooter paired, fully press the accelerator and squeeze the brake lever 3 times to display the serial number in the Find My app.

FR-CA Pour les utilisateurs iOS ayant jumelé la trottinette avec l'application Localiser, appuyez à fond sur l'accélérateur et serrez le levier de frein 3 fois pour afficher le numéro de série dans l'application Localiser.

ES-LA Para los usuarios de iOS que han emparejado la patineta usando la app Buscar, presione completamente el acelerador y apriete la maneta de freno 3 veces para mostrar el número de serie en la app Buscar.

Legal Statement/Déclaration légale/Declaración legal

- EN Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.
- FR-CA L'utilisation du badge « Fonctionne avec Apple » signifie qu'un produit a été conçu spécifiquement pour fonctionner avec la technologie identifiée par ce badge, et qu'il a été certifié par le fabricant comme étant conforme aux spécifications et exigences du réseau Find My d'Apple. Apple n'est pas responsable du fonctionnement de cet appareil, de son utilisation ni de sa conformité aux normes de sécurité et de réglementation.
- ES-LA El uso del distintivo "Funciona con Apple" indica que el producto ha sido diseñado específicamente para funcionar con la tecnología identificada en dicho distintivo y ha sido certificado por el fabricante como conforme a las especificaciones y requisitos de la red Apple Find My. Apple no es responsable del funcionamiento de este dispositivo ni de su uso, ni de su conformidad con las normas de seguridad o regulaciones.

Statement/Déclaration/Declaración

- EN Apple, the Apple logo and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Google, Google Play and the Google Play logo are trademarks of Google LLC.
- FR-CA Apple, le logo Apple et App Store sont des marques déposées d'Apple Inc. aux États-Unis et dans d'autres pays. Google, Google Play et le logo Google Play sont des marques déposées de Google LLC.
- ES-LA Apple, el logotipo de Apple y App Store son marcas registradas de Apple Inc. en EE. UU. y otros países. Google, Google Play y el logotipo de Google Play son marcas registradas de Google LLC.



Scan the QR code to access electronic user manuals

Scannez le code QR pour accéder aux manuels d'utilisation électroniques

Escanee el código QR para acceder a los manuales de usuarios

For info & support/Infos & SAV/Info y soporte:
service_us@navee.tech / service.naveetech.com

Original instructions
Traduction de la notice originale
40150500010099-NA

NAVEE

NAVEE Electric Scooter

G5 US/G5 Pro US/G5 Max US

EN

Important Information

FR-CA

Informations importantes

ES-LA

Información de seguridad

1. Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT! Please read carefully before using the product and keep for future reference. For detailed e-manual, please visit www.naveetech.com.

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

SAVE THESE INSTRUCTIONS

WARNING - To reduce the risk of injury, user must read instruction manual

Prolonged Exposure to UV Rays, Rain and the Elements May Damage the Enclosure Materials, Store Indoors When Not in Use.

- The scooter shall be used by one person only. Obligation to always wear shoes. Do not divert the use of the vehicle. This product is for personal riding only and is not intended for acrobatic or stunt use.
- The product is recommended for riders above age of 16 and below age of 50. People who are not suitable for riding this product include: (1) Persons under the influence of alcohol or drugs. (2) Persons who are unable to engage in strenuous physical activity due to illness or medical conditions. (3) Persons with poor balance or impaired motor skills. (4) Persons whose weight exceeds the product limit. (5) Pregnant women. (6) Persons with visual or hearing impairments.

- Comply with local laws and regulations when riding this product. Do not ride where prohibited by local laws.
- In countries or regions where there are currently no national standards or regulations regarding electric scooters, you must strictly follow the safety instructions outlined in this manual when operating the product. Failure to do so may pose safety risks to children. Brightway Innovation Intelligent Manufacturing (Hangzhou) Co., Ltd shall not be held directly or jointly liable for any personal injury, property damage, accidents, legal disputes, or any other adverse consequences resulting from misuse or use in violation of the guidance provided in this manual.
- Do not ride in traffic lanes or residential areas where vehicles and pedestrians are both allowed. When passing through a place designated for pedestrians who are entitled to the right-of-way laws like crosswalk, please get off to walk along with the scooter.
- For your first ride, avoid areas where children, pedestrians, pets, vehicles, bicycles, or other obstacles may appear.
- Perform a basic inspection of the electric scooter before each ride. If there are abnormal conditions such as loose parts, low battery alerts, flat tires or excessive wear of tires, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.
- Take the time to learn the basics of the practice to avoid any serious accident that can take place in the first months. Information on practice and safe use (can be found on the website: www.naveetech.com)
- Ensure clear visibility and make sure others can see you while riding.

- Do not ride in bad weather, low visibility, or after intense physical exertion.
- Do turn on the headlight and slow down the speed when you ride at dark.
- Always park the scooter with kickstand on an even and stable surface.
- This electric scooter is a leisure device. However, when entering a public area, it will be considered a means of transportation and subject to possible safety risks for all means of transportation. Riding in strict accordance with the instructions in this manual will protect you and others to the greatest extent.
- The user should check the limits of use in accordance with the local regulations. Ride the scooter on the roads or areas permitted by local regulations and laws and park it in the areas permitted. If the local regulations and laws have different provisions on the maximum speed, the local regulations and laws will prevail. Please respect and follow the road safety and vehicle rules.
- Respect pedestrians' Right of Way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter down to pass from their left, and keep to the right at a low speed while riding across them (applicable to countries where vehicles drive on the right). When you drive across pedestrians, keep the lowest speed or getting off the vehicle.
- In any case, anticipate your trajectory and your speed while respecting the code of the road, the code of the sidewalk and the most vulnerable. Notify your presence when approaching a pedestrian or cyclist when you are not seen or heard. Cross the protected passages while walking. Cross the protected passages

while walking. Avoid high traffic areas or overcrowded areas.

- Riding with high speed or a speed that is not appropriate or adequate for the situation (bad weather conditions, bad surface conditions, or the like) may lead into a potential loss of stability or loss of control. To reduce any risk, you must follow all instructions in this manual. Be careful when mounting and dismantling the product, it may fall and cause injury.
- Traffic in the city has many obstacles to cross such as curbs or steps. It is recommended to avoid obstacle jumps. It is important to anticipate and adapt your trajectory and speed to those of a pedestrian before crossing these obstacles. It is also recommended to get out of the vehicle when these obstacles become dangerous due to their shape, height or slippage.
- Do not lend your scooter to whoever does not know the operations. Before lending the electric scooter to others, please make sure that the rider has read this instruction manual and watched the instruction video, and understood the basic operation. Remind riders to wear safety protection correctly to ensure the safety of riders.
- Contact your seller for appropriate training organizations.
- In all cases, take care of yourself and others.
- Any load attached to the handlebar will affect the stability of the vehicle.
- Do not touch the brake system, it could cause injuries due to sharp edges. The brake may become hot in use. Do not touch after use.
- The A-weighted emission sound pressure level is less than 70 dB(A).
- For a better riding experience, it is recommended to carry out a regular maintenance of the product.

- Eliminate any sharp edges caused by use.
- Accessories and any additional items which are not approved by the manufacturer shall not be used.
- Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.
- The self-tightening nuts as well as the other self-tightening fastenings may lose their efficiency and that they may need to be retightened.
- Regularly check the tightening of the various bolted elements, in particular the wheel axles, the folding system, the steering system and the brake shaft.
- Do not modify or transform the vehicle, including the steering tube and sleeve, stem, folding mechanism and rear brake.
- Make sure the scooter is turned off when being transported and kept in its original packaging if possible.
- In order to avoid accidental injuries such as electric shock and fire caused by improper use, please read the instructions carefully before use, and keep them properly for future reference.
- Please use this product in accordance with the instructions in the User Manual. Users are responsible for any loss or damage arising from improper use of this product.
- Power-off the vehicle during charging, or into a certain nonoperational mode.
- Do not charge if the charge port or charge cable is wet. Read this manual carefully before charging.
- Do not charge the scooter at an ambient temperature above 40°C or below 0°C.


- The appliance is not intended for use at elevations greater than 2000 m above sea level.
- The braking distance will increase in wet condition.
- The external flexible cable or cord of this transformer (charger) cannot be replaced; if the cord is damaged, the transformer (charger) shall be scrapped.
- If the external flexible cable or cord of this transformer is damaged, it shall be replaced by the manufacturer or their service agent or a similarly qualified person in order to avoid a hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This product contains batteries that can only be replaced by qualified technicians or after-sales service.
- This appliance contains batteries that are only replaceable by skilled persons.
- **WARNING:** For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance. Do not use a battery charger from any other product. Keep a safe distance from the surrounding combustibles when charging, the vehicle must be placed in a well-ventilated area.
- **WARNING:** Do not use any third-party battery or battery charger. Use only with FY0634201300(G5)/FY-5461500(G5 Pro)/FY-5461500(G5 Max) supply unit.
- **WARNING!** Keep plastic covering away from children to avoid suffocation.
- **WARNING!** Never use the product close to a water source.
- **WARNING!** Stop using the product when damaged.

- **WARNING** – Risk of Fire and Electric Shock – No User Serviceable Parts.
- **WARNING !** As with any mechanical component, a vehicle is subject to high stresses and wear. The various materials and components may react differently to wear or fatigue. If the expected service life for a component has been exceeded, it may break suddenly, therefore risking causing injuries to the user. Cracks, scratches and discoloration in the areas subject to high stresses indicate that the component has exceeded its service life and please contact an authorized or a specialized repairer.


Watch out for hand crush and pinch points hazards in the following positions during use:

1. Between the handlebar and the stem when installing the handlebar.
2. Openings on the wheels.
3. Between the front mudguard and the deck.
4. Between the quick release lever and the quick release lever lock, and between the folding joint and the stem when folding or unfolding.
5. Between the mudguards and the wheels.

2. Product Overview

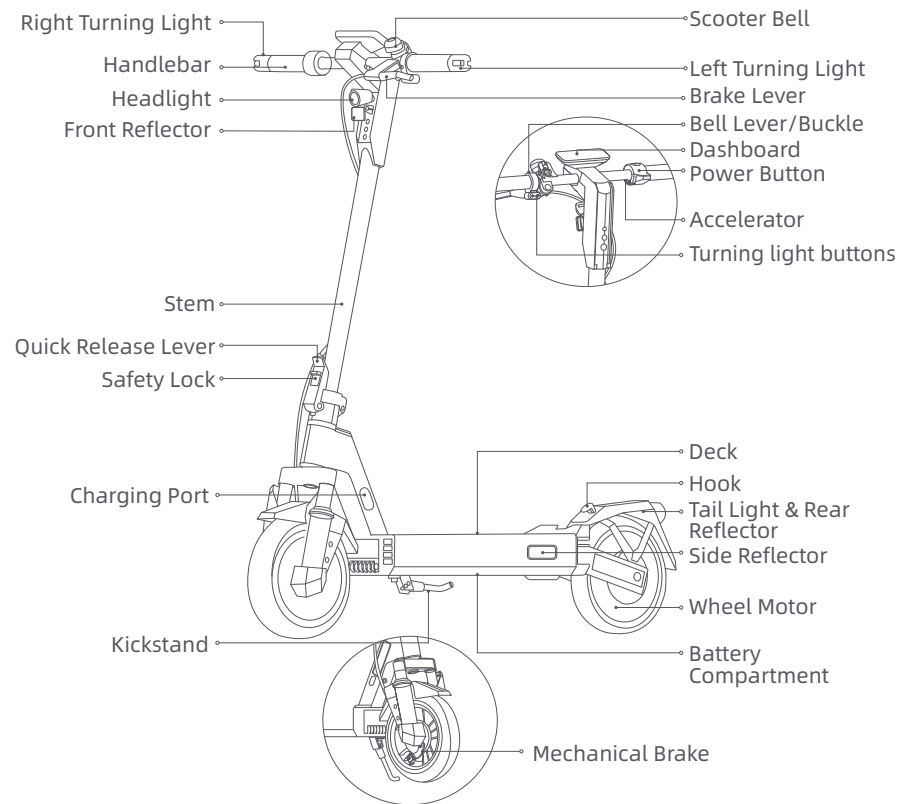


Power Button

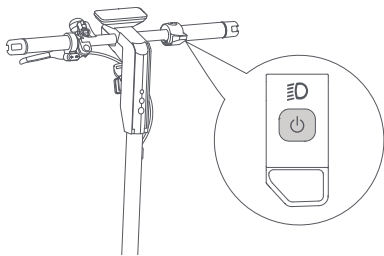

Press the button  to turn the scooter on, and hold the button  for 2 to 3 seconds to turn the scooter off. When the scooter is on, press twice to change riding modes.

Dashboard

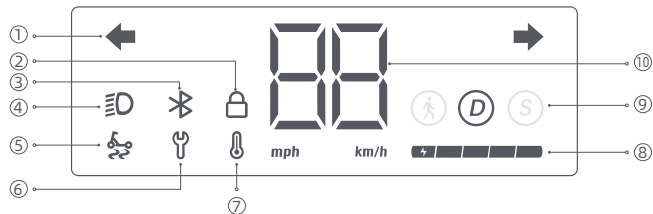

- ① **Turning Indicator:** When the scooter is powered on, press the left or right turn button. The corresponding turn signal and indicator on the dashboard will start blinking. The buzzer will sound at the same frequency. Press the same button again to turn off the turn signal.

- ② **Lock:** This icon lights up when the scooter is locked. You can lock or unlock the scooter using the NAVEE App.
- ③ **Bluetooth:** The Bluetooth icon remains lit when the scooter is successfully connected to your mobile device. After connecting, you can enable the Proximity Unlock feature in the app. To lock the scooter, turn off the scooter, move your phone away—the motor will automatically lock. To unlock, turn the scooter back on, then squeeze either brake lever while your phone is nearby—the motor will unlock automatically.
- ④ **Lights:** While the scooter is on, press the power button to turn the headlight and taillight on or off. You can also enable the Auto-Sensing Light feature via the NAVEE App. Once enabled, the headlight and taillight will automatically turn on or off based on ambient lighting conditions during your ride.
 Note: After activating the auto-sensing light function, manually turning the lights on or off will temporarily disable it. To reactivate the feature, restart the scooter.
- ⑤ **TCS (Traction Control System):** When enabled, the TCS function helps prevent excessive tire slippage and improves overall stability during actions like starting, accelerating, or turning. TCS can be switched on or off via the NAVEE App.
- ⑥ **Error Indicator:** A solid red wrench icon indicates a fault in the system.
- ⑦ **Temperature Warning:** The thermometer icon lights up when the battery temperature is too high or too low. Wait until the temperature returns to a normal range before using or charging the scooter.

- ⑧ **Battery Level:** The battery level is displayed using 5 bars. Each bar represents approximately 20% of a full charge.
- ⑨ **Riding Modes:**  indicates Walking Mode – maximum speed: 6 km/h.  indicates Standard Mode.  indicates Sport Mode.
- ⑩ **Speedometer:** Displays current riding speed. Shows error codes when a fault is detected, and battery level while charging.

3. Care & Maintenance

Cleaning

Before cleaning your scooter:

Turn off the power. Unplug the charging cable. Make sure the charging port cover is fully closed.

To clean:

Wipe the scooter with a soft, damp cloth. For stubborn dirt, use a soft brush (e.g., a toothbrush). Finish by drying all surfaces with a clean, dry cloth.



Avoid the following:

- Using high-pressure water (this may damage internal components).
- Using corrosive cleaners (they can harm both external and internal parts).

Battery Care

To maximize battery life:

- Avoid fully draining the battery. Charge it regularly.
- Always keep usage, charging, and storage temperatures within the limits stated in the specifications.
- If unused for a long period, charge every 60 days to prevent permanent battery damage. A fully charged scooter can remain in standby for about 120–180 days.

Battery Warnings:

- Only use the original charger and battery provided with your scooter.
- Never use a battery or charger from another model or brand.
- Do not charge or use the scooter if the battery is damaged or has been exposed to water.
- Do not attempt to remove the battery yourself – it requires professional servicing.

Storage

If storing the scooter long-term:

- Fully charge the battery. Power off the scooter. Store in a cool, dry place away from sunlight and humidity.
- Use the original packaging for transport if available.

Storage Reminders:

- Keep the scooter away from flammable materials.
- Avoid storing in direct sunlight or very damp environments.
- This product contains a lithium battery. Follow local laws for transportation and storage.

Environmental Notice

The scooter contains a rechargeable lithium-ion battery pack, and improper disposal of these batteries will cause harm to the environment. Follow the steps below to remove the batteries before disposing of the scooter and discard the batteries properly:

1. Before removing the batteries, it is recommended to fully deplete them and ensure that the scooter is disconnected from the power supply. Next, unscrew the bottom cover of the scooter to remove it, and remove the battery pack retaining bracket.
2. Unplug the battery connector, and then remove the batteries. Do not damage the battery case to avoid any risk of injuries. Do not use the battery if it is damaged, has a strange odor, emits smoke, or gets overheated. Keep a leaking battery away from other objects.
3. Recycle the removed battery at a certified battery recycling facility.

Scooter Maintenance Schedule (Recommended):

Maintaining the scooter regularly can help keep the scooter neat and in good condition, avoid safety hazards, minimize breakdowns, slow down the deterioration of the scooter, and extend the scooter's service life.

Item	Service Object	Actions	Every month	Every 3 months	Every 310.7 miles (500 km)/ 6 months	Every 621.4 miles (1000 km)/ 1 year	Every 6213.7 miles (10000 km)/ 3 years
Tires	Tire Tread Wear	Check whether the tire is cracked, deformed, worn, etc.			√	√	√
Screws	Handlebar Assembly Screws	Tighten the screw that connects the handlebar assembly with the stem assembly (with the recommended torque of 3.0 ± 0.5 N·m).		√	√	√	√
		Tighten the accelerator screw (with the recommended torque of 2.0 ± 0.1 N·m).				√	√
		Tighten the brake lever screw (with the recommended torque of 3.5 ± 0.3 N·m).				√	√

Item	Service Object	Actions	Every month	Every 3 months	Every 310.7 miles (500 km)/ 6 months	Every 621.4 miles (1000 km)/ 1 year	Every 6213.7 miles (10000 km)/ 3 years
Functions	Brake Adjustment	Before adjusting, make sure the scooter is turned off and not being charged. Tool: 5 mm hex key (the tool needs to be prepared by the user). When the brake is too tight, use the tool to turn the nut on the screw rod counterclockwise, so as to slightly shorten the brake cable's exposed bottom part. When the brake is too loose, use the tool to turn the nut on the screw rod clockwise, so as to slightly lengthen the brake cable's exposed bottom part.			√	√	√
	Charging	Charge the scooter at a suitable temperature. The indicator on the battery charger is red when the scooter is charging, and turns green when the scooter is fully charged. The control panel will show the charging status simultaneously during charging.			√	√	√
	Steering	Turn the handlebar 60° to the left and right to make sure the turning angle is correct and the steering is free from resistance and stagnation.				√	√
Important Components	Battery Assembly	Fully charge the scooter before leaving it unused for a long time, and turn it on to charge every 60 days.					√

4. Specifications

Product	Name		NAVEE Electric Scooter		
	Model		G5	G5 Pro US	G5 Max US
Dimensions	Vehicle: L × W × H ^[1]		44.9 × 22.6 × 38.0 in (1140 × 573 × 1220 mm)		
	After Folding: L × W × H		44.8 × 22.4 × 21.4 in (1138 × 570 × 544 mm)		
Net Weight	Vehicle Net Weight		46.1 lbs (20.9 kg)	46.7 lbs (21.2 kg)	49.8 lbs (22.6 kg)
	Load Range		55.1 - 264.6 lbs (25-120 kg)		
Rider	Age		16-50 years		
	Body Length		3'11"-6'6"(120-200 cm)		
Assembled Electric Scooter	Max. Speed		20 mph (32 km/h)		
	General Range ^[2]		Approx. 28 miles (45 km)	Approx. 34.2 miles (55 km)	Approx. 43.5 miles (70 km)
	Gear Range ^[3]	D	Approx. 23 miles (37 km)	Approx. 26.7 miles (43 km)	Approx. 34.8 miles (56 km)
		S	Approx. 15.5 miles (25 km)	Approx. 17.4 miles (28 km)	Approx. 23.6 miles (38 km)
	Max. Climbing Ability		Approx. 18%	Approx. 20%	Approx. 24%
	Suitable Surfaces		Cement or asphalt road, with benches of less than 1 cm or crevices narrower than 3 cm		
	Operating Temperature		14-104 °F (-10 to 40 °C)		
	Storage Temperature		-4-113 °F (-20 to 45 °C)		
	IP Rating		IPX5		
	Charging Time		Approx. 6 h	Approx. 8 h	Approx. 8 h
Battery Pack	Model		T2208-BA3A	T2326-BA3A	T2326-BD4A
	Nominal Voltage		36 Vdc	46.8 Vdc	46.8 Vdc
	Max. Charge Voltage		42 Vdc	54.6 Vdc	54.6 Vdc
	Rated Energy		275.4 Wh	358.02 Wh	477.36 Wh
	Intelligent Battery Management System		Over-heating, short circuit, over-current, over-discharge, and over-charge protection		
	Normal Charging Temperature Range		32-104 °F (0 to 40 °C)		
	Rated Capacity		7.65 Ah	7.65 Ah	10.2 Ah

Wheel Motor	Rated Power	400 W	400 W	500 W
Battery Charger	Model ^[4]	FY0634201300	FY-5461500	FY-5461500
	Output Power	53.3 W (0.0533 kW)	80.4 W (0.0804 kW)	80.4 W (0.0804 kW)
	Input Voltage	100 à 240 V~ 50/60 Hz		
	Max. Output Voltage	/	/	54,6 Vcd
	Rated Output	42.0 Vdc ; 1.3 A	54.6 Vdc ; 1.5 A	54.6 Vdc ; 1.5 A
Tire	Front & Back Tires	10-inch Tubeless Tires		
Bluetooth	Frequency Band	2402-2480MHz		
	Max. RF Power	BLE (1 Mbps): 5.96 dBm BLE (2 Mbps): 5.94 dBm		

[1] Vehicle height: From the ground to the top of the scooter.

[2] General range: Measured when there is no wind and at 25°C, the scooter is fully charged to ride at a constant speed of 15 km/h on a flat surface with a load of 75 kg.

[3] Gear Range: Measured when there is no wind and at 25°C, the scooter is fully charged to ride at the max. speed in each gear on a flat surface with a load of 75 kg.

[4] To recharge the battery, only use the battery charger provided in the package. Please see battery charger parameters in Specifications.

5. Certifications

FCC Supplier's Declaration of Conformity

This supplier's declaration of conformity is hereby for

Product: Electric Scooter

Model Number(s): G5 US, G5 Pro US, G5 Max US

Brand/Trade: NAVEE

We declare that the above mentioned edvice has been tested and found in compliance with CFR 47 Part Regulation.

Responsible Party—U.S.Contact Information

Company: SPACEWALKER PTE. LTD.

Address: 60 PAYA LEBAR ROAD #07-54 PAYA LEBAR SQUARE SINGAPORE (409051)

Country: Singapore

FCC Compliance Statement for USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Industry Canada (IC) Compliance Statement for Canada

This device complies with Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

To maintain compliance with the RF exposure requirement, a separation distance of 20 cm between the device and the human should be maintained.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Mode	G5 US	G5 Pro US	G5 Max US
FCC ID	2BK3M-G5U0001	2BK3M-G5PROU1	2BK3M-G5MAXU1
IC	33043-G5U0001	33043-G5PROU1	33043-G5MAXU1

6. Safety Warning



Danger!
Read user manual
before use.



WARNING
For indoor use only
(for the charger).



WARNING
Read carefully and keep for
future reference.



WARNING
Class II appliance



WARNING
Hot Surface



WARNING
Sharp Edges



Do not expose to moisture



The appliances intended
for use at altitudes not
exceeding 5000m.

7. Warranty Summary

This product includes a limited warranty that covers manufacturing defects for a specified period from the date of purchase. Warranty terms, duration, and service availability may vary by country or region. The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs. For detailed terms and local support, please visit <https://service.naveetech.com>.