

此页不印刷


形式:粘胶(20P)

尺寸:159x110mm

材质: 120g双铜

工艺: 单面 双面印刷, 封面覆哑膜

User manual

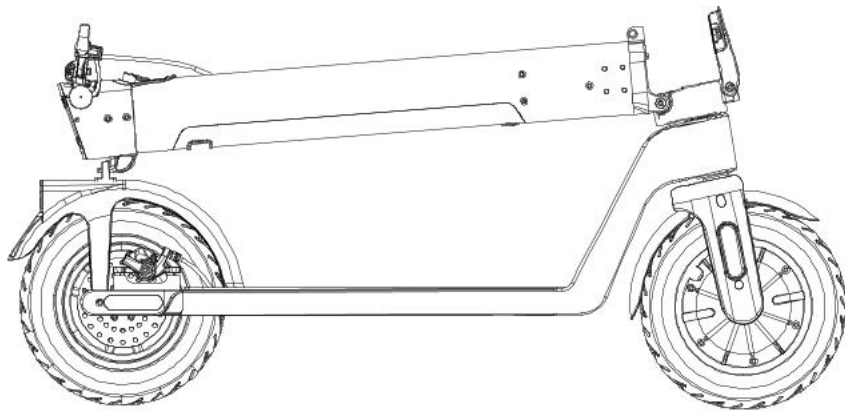

Safety rules.

Warning:

Your new e-scooter is a powerful machine. Use extreme caution when riding it.

- ✚ **Always check your local traffic rules and weather conditions.**
- ✚ **Always check the tyres, brakes and other parts before riding. Contact customer service if needed.**
- ✚ **Always stay alert to avoid collision and causing damage around you.**
- ✚ **Never tamper with of “modify” your e-scooter’s external or internal structure.**
- ✚ **Never immerse your e-scooter in water.**



Wear personal protective equipment.

Precautions:

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Age restriction:

This e-scooter is for riders over 16 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Read this user manual before using your e-scooter.

Before you start:

- ✦ For your safety, examine this manual carefully before you start using your e-scooter.
- ✦ Make sure that you can physically handle your e-scooter under all circumstances. The following tips are here to make sure you don't hurt yourself or anybody else.
- ✦ If something happens and you're injured, please get in touch with us immediately.

Caution

Improper use of your e-scooter or failure to follow this user manual's directives may result in injury. We do not take responsibility for injuries caused by misuse.

A few tips...

- ✦ Check that your e-scooter is in working condition before each use.
- ✦ Make sure you perfectly know your e-scooter's controls before you ride.
- ✦ Always follow local traffic laws. Please familiarize yourself with them.
- ✦ Only ride your e-scooter in permitted areas (e.g. cycling lanes, etc.)
- ✦ Wear protection (e.g. helmet, elbow, knee, wrist protectors.)
- ✦ Never drink, eat or use your mobile phone while riding your e-scooter.
- ✦ Beware of overhead obstacles, speed bumps and road deteriorations.
- ✦ Avoid riding in poor weather conditions.
- ✦ Do not ride this e-scooter if you are younger than 16.



Always use a helmet, elbow and knee pads when riding.



Do not ride in heavy rain or other poor weather conditions.



Don't carry passengers. Ride your e-scooter solo.



Do not use your phone or headphones while riding.



If pregnant, get approval from your doctor before riding.



Watch out for uneven surfaces, cracks, ice, snow, mud and steep slopes.



Maximum load: 120 Kg.



Avoid hitting curbs and potholes.




Do NOT drink and ride.



Use bike lanes when available.

Product introduction.

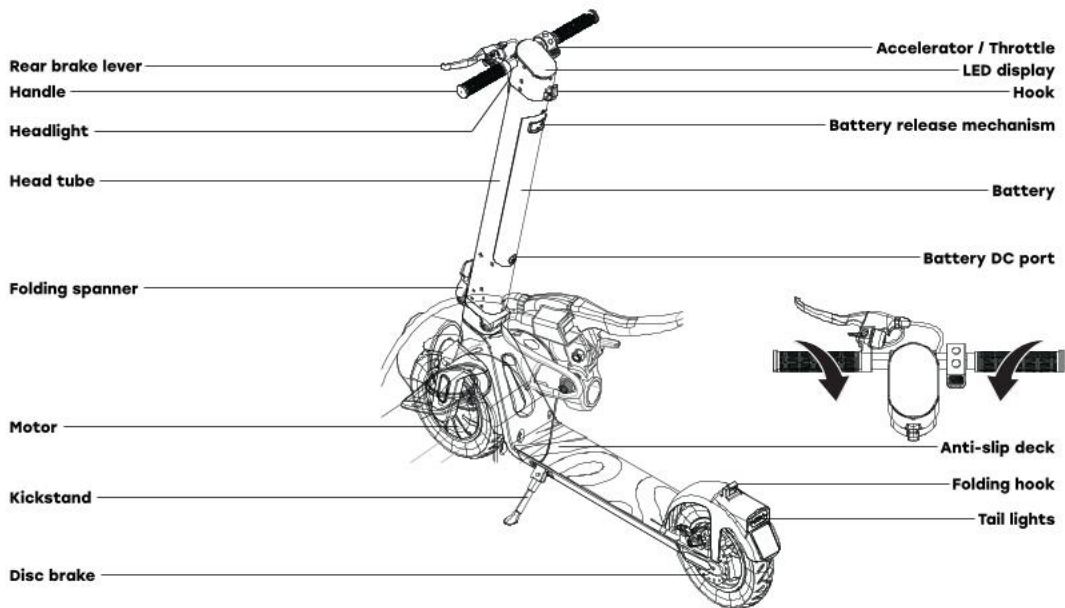

Controls.

Power button

Long press the power button to turn on / off.

Brake lever

Pull the lever to slow down.

Cruise mode

To use cruise mode, hold the current speed for at least 6 seconds. Once cruise mode is activated, you don't need to touch the throttle to move. To exit, just accelerate or brake.

Function button


One click switches the ride mode.

Walk mode (Gear 1)
Normal mode (Gear 2)
Sport mode (Gear 3)

Double click turns the lights on / off.

Thumb throttle



Slowly press the throttle to start accelerating.

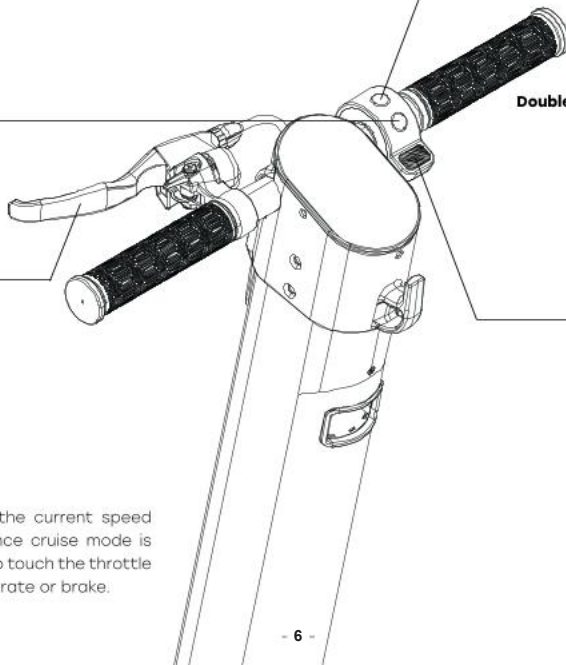

LED Display.




Assembly instructions.

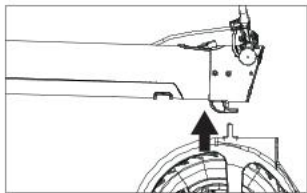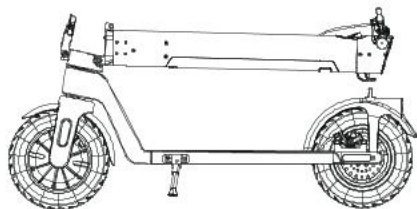


1.

Slide the front of the scooter to the right, pull up the pole after the hook slides out, and tighten the pole locking wrench.

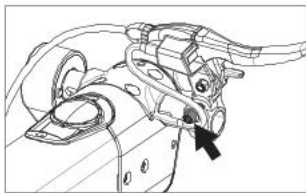

2.


Tighten the brake lever on the handle bar, using a M5 hex key.

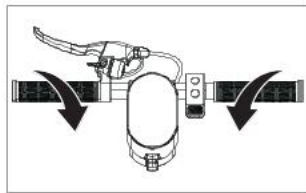


3.

Fix the left handle bar to the left side and the right handle bar to the right side of the stem. Tighten by screwing them firmly.


Folding mechanism.

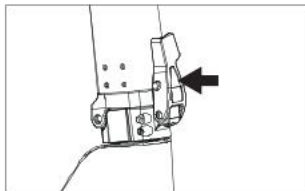

- 1.**
Press the self-locking button on the right side of the wrench to open the folding wrench and press down.

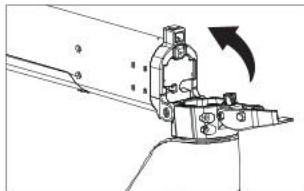


- 2.**
Fold the head tube and tuck the wrench in.

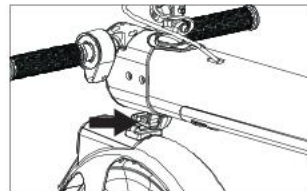


- 3.**
Slide the front hook into the hook on the fender.

Ready to be tucked away!

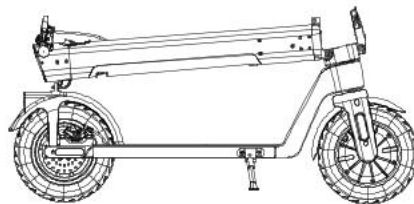


Battery handling.

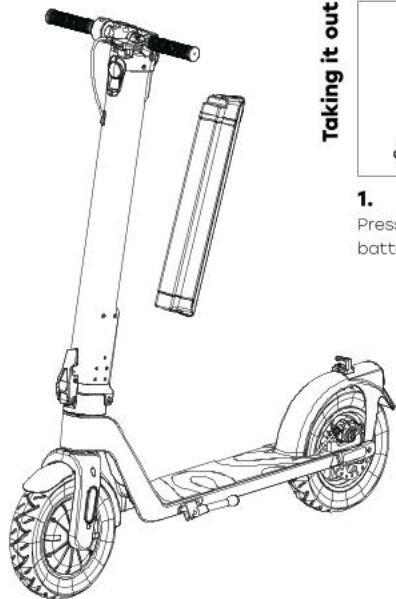


Taking it out



- 1.**
Press upward to open the battery lock.

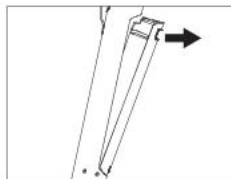


- 2.**
Pull the battery out toward the rear wheels.

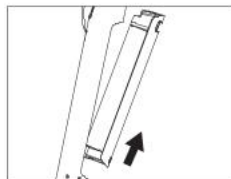

- 3.**
Lift up and take out the battery.

Putting it back

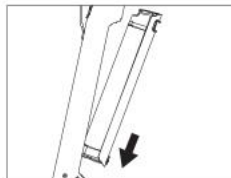

- 1.**
Align the battery terminals with the battery compartment terminals and insert.




- 2.**
Push the upper end of the battery into the battery compartment and lock it.

How to ride.



Wear the accredited protection gear (e.g. a helmet, elbow, knee and wrist protectors).

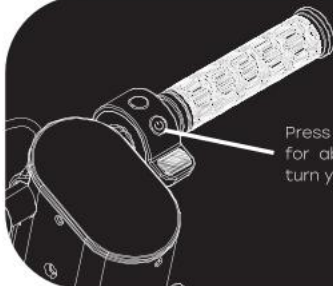

Press the power button for about 2 seconds to turn your e-scooter on.




Press the accelerator and kickstart your e-scooter by launching yourself forward. The motor will only engage after you've taken that first kick and are moving.




Once you are moving, place both feet on the deck. Place your dominant foot behind the other (recommended position). That way you have optimum control over your balance and are able to securely lean your body forwards and backwards.

How to ride.

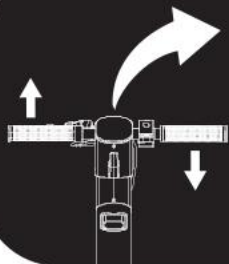


To turn right, pull the right handle towards you while pushing the left handle away from you. While doing so, your e-scooter may lean on the right. Just counter-balance it by leaning on the left.

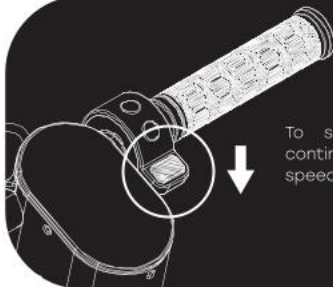

To start accelerating, continuously press on the speed throttle.




While accelerating, make sure to firmly grip the handle bar, pull it towards you and lean forwards on your front leg to keep your balance.

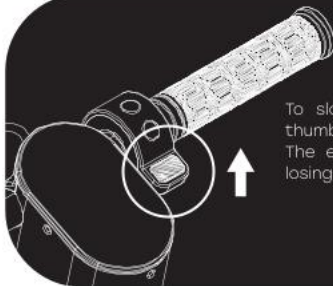

To slow down, lift your thumb from the throttle. The e-scooter will start losing speed.

How to ride.

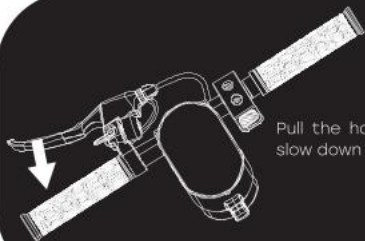

Pull the handle brake to slow down faster or stop.



When you're about to stop, put your back foot down on the ground.

Battery instructions.

Please read the battery instructions to learn how to use and charge it safely. Failing to follow these instructions may shorten the battery's lifespan and cause accidents.


Safety:

- ✦ For the purposes of recharging, only use the detachable supply unit (model: BC042588020) provided with this appliance.
- ✦ NEVER open the battery. You WILL cause an accident and hurt yourself.
- ✦ Keep the battery AWAY from children and pets.

✦ The battery is temperature-protected. Charging temperature may vary from 0 to 40°C, and maximum use temperature at 45°C.

✦ Use your e-scooter regularly and charge it at least once a month to avoid over-discharging of your battery.

✦ Transportation and handling of Lithium batteries is regulated. ALWAYS follow the rules provided by travel, delivery and courier companies.

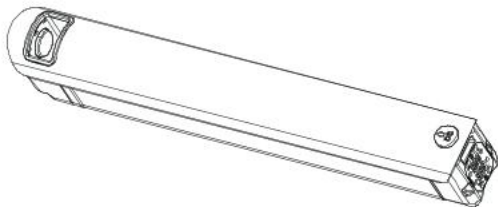


Do not use the battery if:



- ✘ The battery is physically damaged (casing damage, etc.)
- ✘ You notice a smell, excessive temperature or any leakage coming from the battery.


Charging tips:

- ✘ Turn your e-scooter off BEFORE charging.
- ✘ Unplug the battery charger BEFORE turning the e-scooter back on.
- ✘ You can charge the battery when attached to the e-scooter OR detached from it.

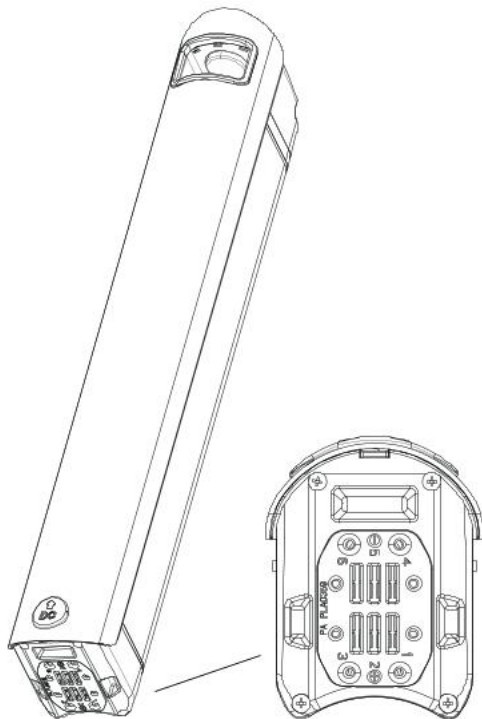

Charging instructions.

- ✦ Open the rubber charging port cover.
- ✦ Make sure the charging port is clean and dry.
- ✦ Connect the charger to the wall plug.
- ✦ Connect the charger to the battery.
- ✦ The light indicator turns red when the battery is charging. If the light indicator is not on, check the connections.
- ✦ When the light turns green, the battery is fully charged. Just unplug the battery from the charger and the charger from the wall.
- ✦ Put the rubber cover back on to avoid any dirt getting in.

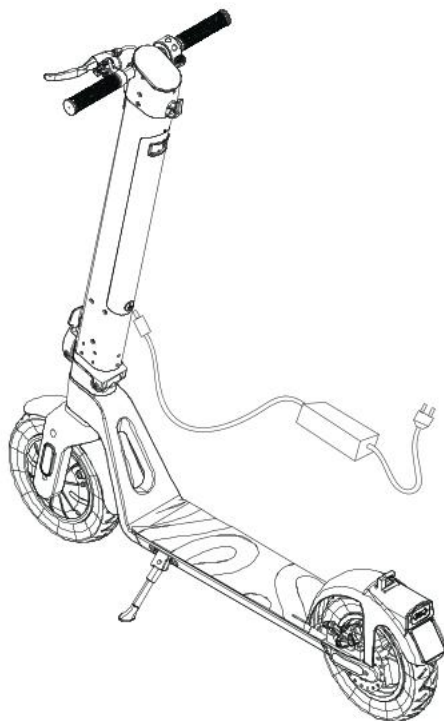


Range information:

Make sure the tyres have enough air to get the longest range. Factors affecting range include rider weight, speed, terrain, temperature and wind.


An 80 kg rider can reach a 30-35 km range on average city terrain with one full charge, reasonable weather and temperature of 20°C.

Lighter weight, flat terrain or chiller temperatures all increase the range potential of your battery charge.

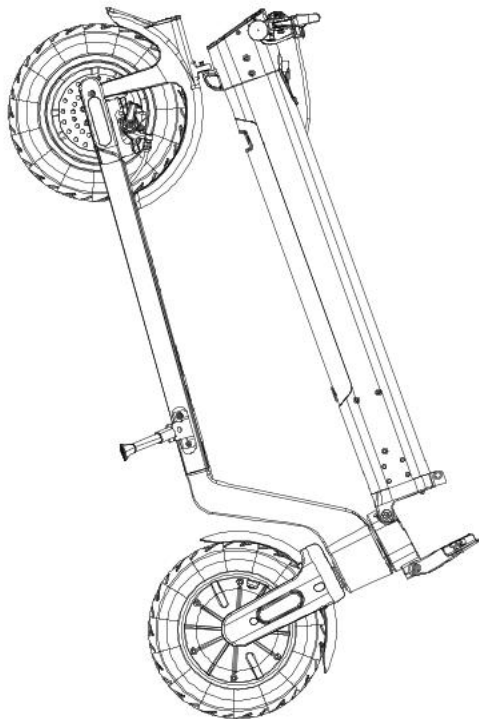

Maintenance.

- ✚ Check the tyre pressure regularly to avoid punctures and maximise your riding range.
- ✚ Only clean the e-scooter with a soft or microfiber cloth. DO NOT use a pressure washer or immerse the e-scooter in liquid.
- ✚ Charge the battery at least once a month to prevent over-discharging.
- ✚ Keep the e-scooter and battery in a dry place. If needed, cover the e-scooter to avoid dust accumulating during storage.
- ✚ DO NOT dismantle the e-scooter. Remember you are covered by our Total Care package. If it breaks down, contact our technical support via the augment mobile app.

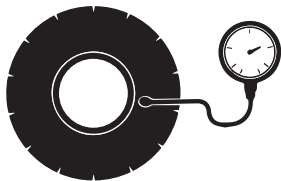

Parameter specification.

Product name:		alturo	
Main specification		Battery specification	
Unfolding size	1117*415*1209mm	Battery type	Li-ion battery
Folding size	1117*415*515mm	Battery capacity	9.6Ah
Center distance of front and rear wheels	829mm	Rated voltage (DC)	50.4V
Net Weight	17.5kg	Maximum charging voltage (DC)	58.8V
Max speed	25km/h	Max Charging Current	2A
Max load	120kg	Charging Time	5-6h
Operating temperature	-10~+40°C	Charger specification	
Storage temperature	-20~+45°C	Input voltage (AC)	200~240V (50~60Hz)
Waterproof level	IPX4	Output Power	117.6W
Motor specification		Output voltage	58.8V
Motor type	Permanent magnet brushless	Output current	2A
Rated power	500W		
Rated voltage	50.4V		

